

LED Mini 4IN1 Effects light



USER MANUAL

Thanks you for purchasing this product.Please read user guide for safety and operations information before using the product.Keep this manual for future reference. Please check the attachments listed on the page after opening carton box. In the event of carton damage of attachments missing in transit,please contact your dealer or our after sales service department.

Attachment: 1. Light:1pcs 2. User Guide:1pcs 3. Power cable:1pcs

NOTICE


- 1, Do not turn on and off the unit frequently.
- 2, Makes sure the power supply connects ground before using.
- 3, This unit is applicable for only indoor use and must be avoided water,moisture and shade damage.Working temperature should be 18~30°C.
- 4, Do not use it successively over 4 hours,otherwise it will shorten its lifetime.
- 5, Use cleaning tissue to remove dust on the external lenses periodically to optimize light output.
- 6 Do not remove or break the warranty label,otherwise it void warranty.
- 7, Always replace with the exact same type fuse,replacement with anything other than the specified fuse can cause fire or electric shock and damage your unit,and will overstep our manufacture's warranty.

TECHNICAL SPECIFICATION

- 1, Voltage: AC110V~220V,50HZ/60HZ,
- 3.Working Modes:Sound Active,Auto,Master-Slave
- 4.Light Source:11pcs LED diode 2pcs laser

Note

This product in the factory works good, packing integrity. All users should strictly abide by the above statement warnings and operating instructions, any damage caused by misuse, the company does not guarantee. Ignore manuals caused fault and problem also is not responsible for the dealer.

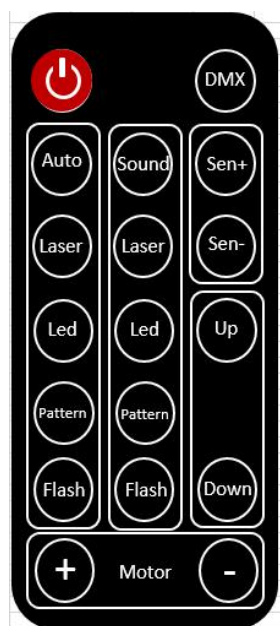

9CH

CH	value	Function
1	0-24	Gobo off
	25-255	Gobo -colors
2	0-9	Light off
	10-44	Red -yellow
	45-79	Green -white
	80-114	Blue -uv
	115-149	Red green white green
	150-184	Green blue white uv
	185-219	Red blue yellow uv
	220-255	Red green blue white yellow uv
3	0-9	Laser offbb
	10-99	Laser -Red
	100-199	Laser-Green
	200-255	Laser -Red green
4	0-9	Strobe off
	10-255	Strobe -speed
5	0-16	1,2,3,4ch model
	17-33	1ch model
	34-50	2ch model
	51-67	3ch model
	68-84	4 ch model
	85-101	1-2 ch model
	102-118	3-4ch model
	119-135	2-4ch model
	136-152	1-4ch model
	153-169	1-3ch model
	170-186	2-4ch model
	187-203	1-2-3ch model
	204-220	1-2-4ch model
221-237	1-3-4ch model	
238-255	2-3-4ch model	
6	0-9	Gobo -motor off
	10-127	Gobo -motor speed
	128-255	Gobo -motor speed
7	0-9	motor off
	10-255	motor speed
8	0-9	Laser -motor off
	10-127	Laser -motor speed

	128-255	Laser –motor speed
	0-50	
	51-150	Auot
9	151-255	Sound

Display panel instructions:

A001	A001-A512	DMX 512
LA**	LAAu	Laser-auto
	LA r	Laser-red
	LA G	Laser-green
	LArG	Laser –green/red
	LA01-LA20	Auto -speed
	LAoF	Laser off
	LE**	LE 1
LE 2		Green-White
LE 3		Blue—uv
LE 4		Colors auto 1
LE 5		Colors auto 2
LE 6		strobe
LE 7		Auto –LE4-6 model
PA**	PA 1	Red
	PA 2	Green
	PA 3	Blue
	PA 4	White
	PA 5	Single colors
	PA 6	Auto colors
	PA 7	Strobe
	PA 8	Auto PA 4-6
FL**	FLoF	Strobe off
	FL 1-9	Strobe speed
Auto	Auto	Auto model
S**	S100-S120	Sound
	S200-S220	Laser sound
	S300-S320	Effects sound
	S400-S420	Gobo sound
	S500-S520	Strobe sound