



11	Automatic mode	0-59 No effect
		60-159 Self walking
		160-255 sound control
12	Function select	0-20 No use
		21-100 X axis self-walking
		101-200 Y-axis self-walking
		201-249 XY axis self-walking
		250-255 Reset (5 seconds)
13	Lamp belt control	0-255

Front/Rear Panel

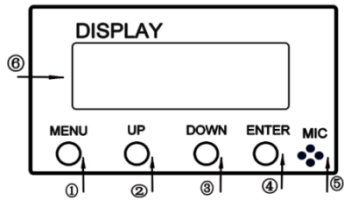

- 1.MENU 2.UP 3.DOWN
4.ENTER(Confirm button) 5.MICROPHONE 6.DISPLAY SCREEN

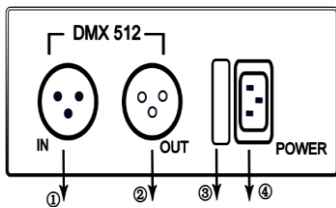

- 1.DMX IN 2.DMX OUT 3.FUUSE 4.POWER IN

The "rSt" is displayed after the power is plugged in.The moving head light is resetting.Please do not operate.

The step to start the Auto mode:

1. Press "MENU" to find "SLnd", and press "ENTER".
2. Press "UP" or "DOWN" to select "Auto",and press "ENTER".

The step to start the Sound Active mode:

1. Press "MENU" to find "SoUd", and press "ENTER".
2. Press "UP" or "DOWN" to select "ON",and press "ENTER".

Instructions for use of LED stage lighting equipment



Please read the instructions carefully before using

Addr	A001-A512	512 Address setting
CHnd	15CH	15 Channel setting
	13CH	13 Channel setting
SLnd	Auto	Mainframe self-walking mode
	SL 1	Control station mode
	SL 2	Auxiliary mode
SHnd	SH 0	Effect 0 (recommended)
	SH 1	Effect 1
	SH 2	Effect 2
	SH 3	Effect 3
Soud	ON	Voice controlled open
	OFF	Voice control switch
SEnS	0-99	Voice-controlled sensitivity volume regulation
LED	OFF	Five seconds later, screen out.
	ON	The screen is always on
dISP	no	Display reverse
	YES	Display forward
rPAN	no	X motor forward rotation
	YES	X motor reversal

rTiL	no	Y-motor positive rotation
	YES	Y-motor inversion
REST	YES	system reset

15channel mode

Channel	function	explain
1	Horizontal operation	0-255
2	Horizontal fine-tuning	0-255
3	Vertical operation	0-255
4	Vertical fine-tuning	0-255
5	Horizontal and vertical speed	0-255
6	aiming	0-255
7	stroboflash	0-255
8	Red tone light	0-255
9	Green tone light	0-255
10	Blue tone light	0-255
11	White tone light	0-255
12	Color walking	0-255
13	No effect	0-59

	Self walking	60-159
	sound control	160-255
14	0-20	No use
	21-100	X axis self-walking
	101-200	Y-axis self-walking
	201-249	XY axis self-walking
	250-255	Reset (5 seconds)
15	Lamp belt control	0-255

13channel mode

Channel	function	explain
1	Horizontal operation	0-255
2	Vertical operation	0-255
3	Horizontal and vertical speed	0-255
4	aiming	0-255
5	stroboflash	0-255
6	Red tone light	0-255
7	Green tone light	0-255
8	Blue tone light	0-255
9	White tone light	0-255
10	Color walking	0-255