

LED stage lighting equipment use


# Mini moving headlight

6CH (Gobo)	0-7	None
	8-15	Gobo 1
	16-23	Gobo 2
	24-31	Gobo 3
	32-39	Gobo 4
	40-47	Gobo 5
	48-55	Gobo 6
	56-63	Gobo 7
	64-71	None
	72-79	Gobo 1 shaking
	80-87	Gobo 2 shaking
	88-95	Gobo 3 shaking
	96-103	Gobo 4 shaking
	104-111	Gobo 5 shaking
	112-119	Gobo 6 shaking
120-127	Gobo 7 shaking	
128-255	Change gobo automatic in turn	
7CH	0-9	None
	10-249	Strobe speed from slow to fast
	250-255	None
8CH	0-255	Dimmer


9CH	0-255	Pan & Tilt Speed
10CH (Function)	0-59	No function
	60-84	Show 3
	85-109	Show 2
	110-134	Show 1
	135-159	Show 0
	160-184	Sound 3
	185-209	Sound 2
	210-234	Sound 1
	235-255	Sound 0
11CH	250-255	Reset after 2s




Please read the instructions carefully before use.

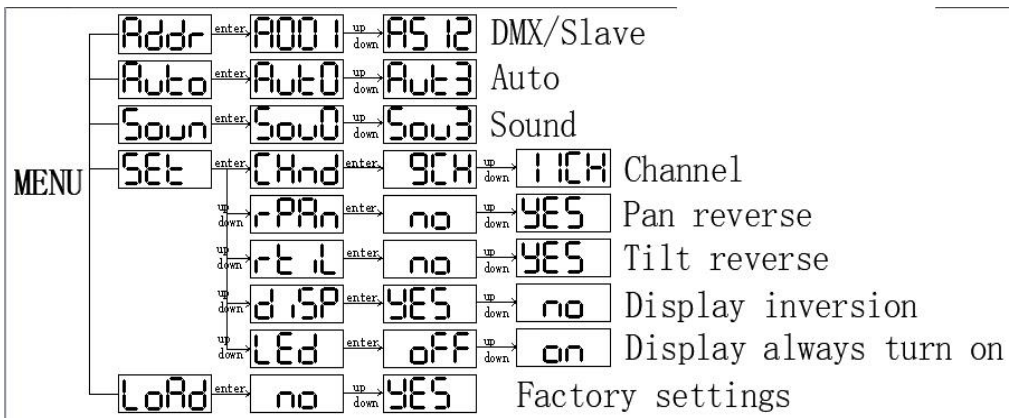

### Front/Rear Panel

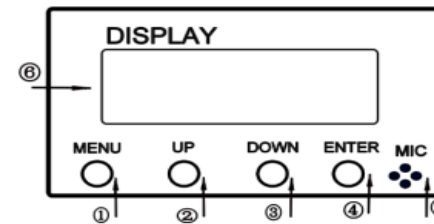


- 1.MENU
- 2.UP
- 3.DOWN
- 4.ENTER(Confirm button)
- 5.MICROPHONE
- 6.DISPLAY SCREEN

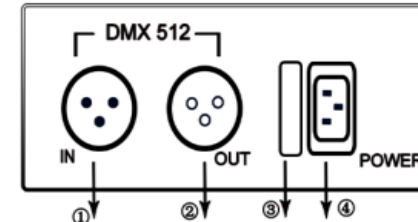

- 1.DMX IN
- 2.DMX OUT
- 3.FUSE
- 4.POWER IN

### 2. Remote Function

- 1) ON/OFF: switch light
- 2) FLASH: strobe (valid in custom mode)
- 3) SAVE: Save
- 4) AUTO 0,1,2: Self-propelled effect 0,1,2
- 5) SOUND0, 1, 2: voice control effect 0, 1, 2
- 6) X+: X-axis position plus / Manual Positioning Switch
- 7) X- : X axis position minus
- 8) Y+: Y-axis position plus
- 9) Y- : Y axis position minus
- 10) COLOR+: Select color in the positive direction
- 11) COLOR-: Reverse color selection
- 12) RCSP+ : color wheel automatic color change interval plus
- 13) RCSP-: color wheel automatic color change interval minus
- 14) GOBO+: positive selection pattern
- 15) GOBO-: Reverse selection pattern
- 16) RGSP+ : Pattern plate automatic switching interval plus
- 17) RGSP- : Automatic switching interval time of pattern plate

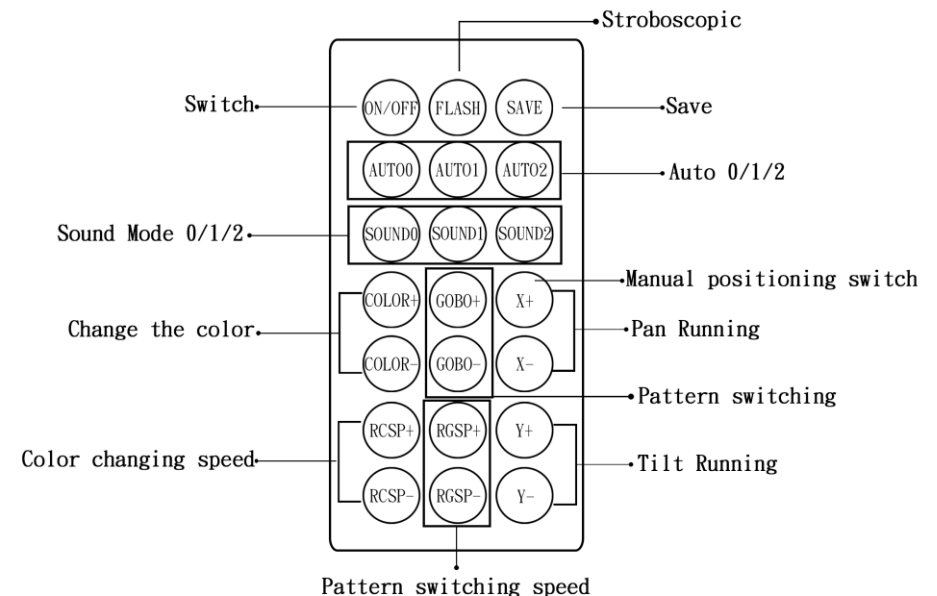

## 9 Channel

Channel	Value	Function
1CH	0-255	Pan
2CH	0-255	Tilt
3CH	0-255	Color
4CH	0-255	Gobo
5CH	0-255	Strobe
6CH	0-255	Dimmer
7CH	0-255	Pan & Tilt Speed
8CH	0-255	Function
9CH	250-255	Reset after 2s

**NOTE: The detailed channel value please refer to 11 channel.**

## 11 Channel

Channel	Value	Function
1CH	0-255	Pan
2CH	0-255	Pan Fine
3CH	0-255	Tilt
4CH	0-255	Tilt Fine
5CH (Color)	0-9	None
	10-19	Color 1
	20-29	Color 2
	30-39	Color 3
	40-49	Color 4
	50-59	Color 5
	60-69	Color 6
	70-79	Color 7
	80-89	Color 7+Color 6
	90-99	Color 6+Color 5
	100-109	Color 5+Color 4
	110-119	Color 4+Color 3
	120-129	Color 3+Color 2
	130-139	Color 2+Color 1
140-255	Change color automatic in turn	