

Menu Functions:

Addr	A001-A512	Addressing code
Chnd	12CH or 19CH	Channel option
Mode	Soud	Sound mode
	Auto	Auto mode
SLnd	MAST	Master option
	SLAV	Slave option
Blac	YES/ NO	Standby mode
Soen	ON/OFF	Sound switch
Soud		Sound sensitivity:0-100
Pan	YES/ NO	Level reverse
1tiL	YES/ NO	Vertical reverse
2tiL	YES/ NO	Vertical reverse
3tiL	YES/ NO	Vertical reverse
DISP	YES	Display positive
	NO	Display reverse
LED	ON/OFF	Background Light Switch
Test	YES	Auto testing
Def	YES/ NO	Restore factory setting
Rst	YES/ NO	Whole light reset

12 Channel Functions:

CH1	X-axis motor CH	0---127	0° -----360° locate
		128---191	Clockwise Slow to Fast
		192---255	Anticlockwise Slow to Fast
CH2	Y-axis 1CH	0---255	0° -----185°
CH3	Y-axis 2 CH	0---255	0° -----185°
CH4	Y-axis 3 CH	0---255	0° -----185°
CH5	Sum Dimming	0---255	0-----100%
CH6	Strobe	0---9	No strobe
		10---255	Strobe speed Slow to Fast
CH7	R Dimming	0---255	0----100%
CH8	G Dimming	0---255	0----100%
CH9	B Dimming	0---255	0----100%
		0---7	No effect
		8---23	Effect 1
		24---39	Effect 2

		40---55	Effect 3
		56---71	Effect 4
		72---87	Effect 5
		88---103	Effect 6
		104---119	Effect 7
		120---135	Effect 8
		136---151	Effect 9
		152---167	Effect 10
		168---183	Effect 11
		184---199	Effect 12
		200---215	Effect 13
		216---231	Effect 14
		232---255	Effect 15
CH11	Effect speed	0---255	From fast to slow
CH12	Reset	241---250	Reset after 5s

19 CH Functions:

CH1	X-axis motor CH	0---255	0° -----360° Locate
CH2	X-axis 360° rotation	0---15	No function
		128---191	Clockwise Slow to Fast
		192---255	Anticlockwise Slow to Fast
CH3	Y-axis motor 1CH	0---255	0° -----185°
CH4	Y-axis motor 2 CH	0---255	0° -----185°
CH5	Y-axis motor 3 CH	0---255	0° -----185°
CH6	Sum Dimming	0---255	0-----100%
CH7	Strobe	0---9	No strobe
		10---255	Strobe speed slow to fast
CH8	R1 Dimming	0---255	0---100%
CH9	G1 Dimming	0---255	0---100%
CH10	B1 Dimming	0---255	0---100%
CH11	R2 Dimming	0---255	0---100%
CH12	G2 Dimming	0---255	0---100%
CH13	B2 Dimming	0---255	0---100%
CH14	R3 Dimming	0---255	0---100%
CH15	G3 Dimming	0---255	0---100%
CH16	B3 Dimming	0---255	0---100%
CH17	Effect	0---7	No e Effect
		8---23	Effect 1
		24---39	Effect 2
		40---55	Effect 3
		56---71	Effect 4
		72---87	Effect 5
		88---103	Effect 6
		104---119	Effect 7

CH17	EFFECT	120---135	Effect 8
		136---151	Effect 9
		152---167	Effect 10
		168---183	Effect 11
		184---199	Effect 12
		200---215	Effect 13
		216---231	Effect 14
		232---255	Effect 15
CH18	Effect speed	0---255	From fast to slow
CH19	Reset	241---250	Reset after 5s

The "rSt" is displayed after the power is plugged in. The moving head light is resetting.

Please do not operate.


The step to start the Auto mode:

1. Press "MENU" to find "Mode", and press "ENTER".
2. Press "UP" or "DOWN" to select "Auto", and press "ENTER".


The step to start the Sound Active mode:

1. Press "MENU" to find "Mode", and press "ENTER".
2. Press "UP" or "DOWN" to select "Soud", and press "ENTER".

Front/Rear Panel

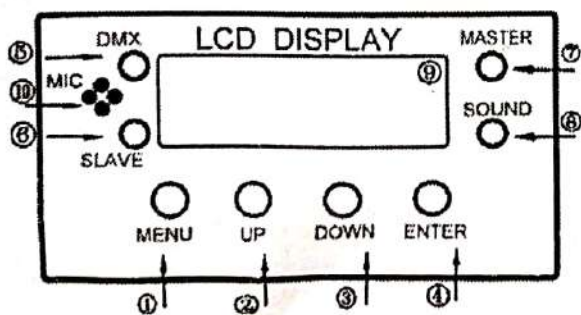

- | | | | |
|---------------------|------|--------------------|---------|
| 1.MENU | 2.UP | 3.DOWN | 4.ENTER |
| 5.DMX Pilot Lamp | | 6.Slave Pilot Lamp | |
| 7.Master Pilot Lamp | | 8.Sound Pilot Lamp | |
| 9.Display Screen | | 10.Microphone | |

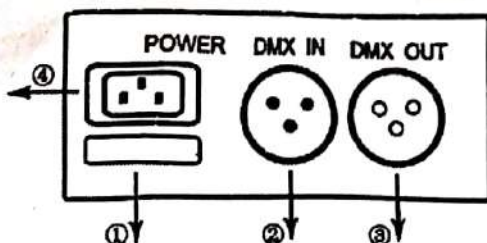

- | | | | |
|---------|----------|-----------|------------|
| 1. FUSE | 2.DMX IN | 3.DMX OUT | 4.POWER IN |
|---------|----------|-----------|------------|