


# MINI LED MOVING HEAD

## LED PAR LIGHT User's Manual


Thank you for using our Led PAR light, For your safety, please read the User's Manual carefully before operation.

Note: This Manual includes the important information of installation, ope-rate as requested in the Manual, meanwhile, please keep the manual for any unexpected requirement.

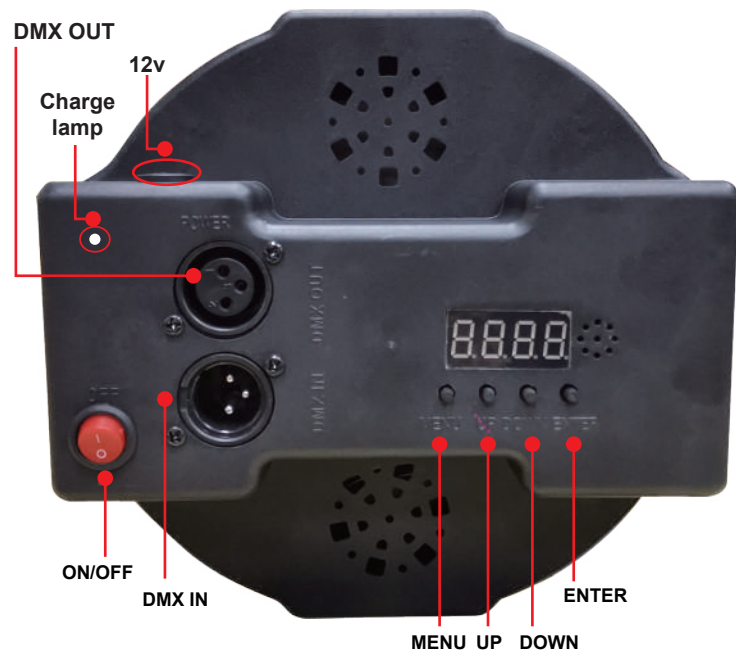


### Appendix

The light is available to receive the DMX512 signal, connect the DMX connector to the panel which marked with "DMX IN", and connect it to the next light. then, connect to the "DMX IN" of next light from the "DMX OUT". The DMX signal terminator is recommended when the lighting signal is connecting. It will avoid to interfere the signal which caused by the electrical noise DMX terminator is a XLR connector, connect with a 12002 resistor between the pin 2 and pin 3 of the XLR connector, and connect it to the OUTPUT socket of the final light. see picture:

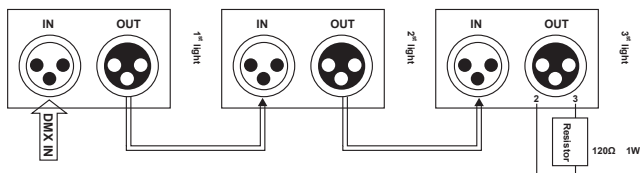

## USER MANUAL

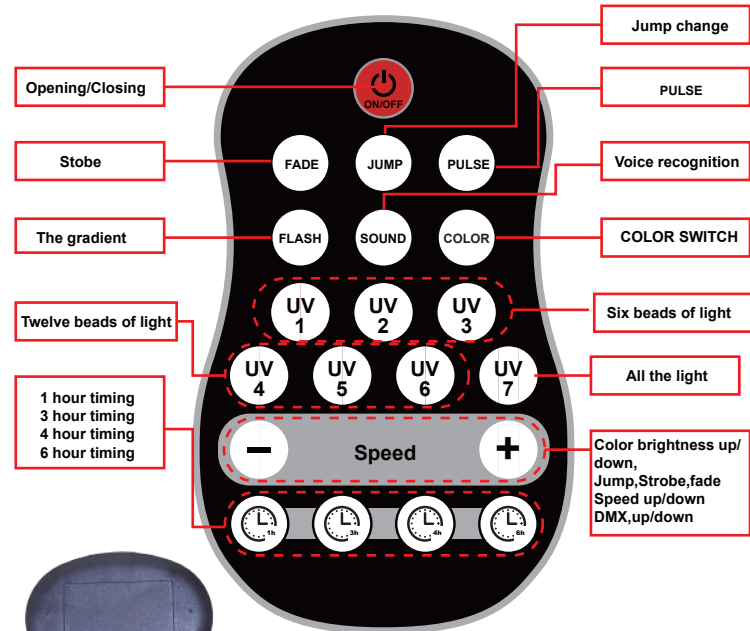

Thanks for using, if you have any questions please Contact our After-sales Service Email.

### LCD Digital display function:

Key-press	Mode	Description
[MENU]	Function	DMX control/colors selection/colors pulse/colors transition/sound control/annual set
[UP]	Up	Increase values
[DOWN]	Down	Decrease values
[ENTER]	Enter	Confirmation button. After pressing this button, all setting values will be saved

### Operation Instructions

MENU	Description
DO01-D512	DMX mode, change numerical value by up and down
CC01-CC64	Colors selection, select different colors by up and down
RB01-RB16	Colors shade, change speed by up and down, the bigger values, the faster
PL01-PL16	Colors pulse transform, change speed by up and down, the bigger values, the faster
SD01-SD16	Colors transition, change speed by up and down, the bigger values, the faster
FL01-FL16	Colors Strobe flash, change speed by up and down, the bigger values, the faster
Sound	Sound control mode
R000-R255	Manual set R, Red color brightness setting, change brightness by up and down
G000-G255	Manual set G, Green color brightness setting, change brightness by up and down
B000-B255	Manual set B, Blue color brightness setting, change brightness by up and down

### DMX Control Parameter Chart

Channels	Value	Function
CH1	0-255	Color brightness control (this change should use together with CH2, CH3 or CH4)
CH2	0	Red light off
	1-255	Red brightness from dark to bright
CH3	0	Green light off
	1-255	Green brightness from dark to bright
CH4	0	Blue light off
	1-255	Blue brightness from dark to bright
CH5	0-7	No strobe flash
	8-255	Strobe flash (from slow to fast), the bigger values, the faster
CH6	0-10	Manual control (CH1-CH5)
	11-60	Colors selection (colors contorted by CH7)
	61-110	Colors shade (colors contorted by CH7), the bigger values, the faster
	111-160	Colors pulse transform (speed contorted by CH7) the bigger values, the faster
	161-210	Colors transition (speed contorted by CH7) the bigger values, the faster
	211-255	Sound control
CH7	0-255	Colors selection/colors shade (the bigger values, the faster)